

Operating Manual

SERIES *KMIX2*

Compact Magnetic Incremental Encoder for linear or rotative Applications



- Round incremental sensor with M10 x 1 fine thread
- Contactless and wear-free measurement
- Compact design and easy to install
- 25 μm resolution at 4-edge triggering
- Integrated evaluation electronics
- Power supply 24 VDC / HTL output
- Periodic index pulse every 5 mm

Publisher ELGO Electronic GmbH & Co. KG
Carl-Benz-Str. 1
D-78239 Rielasingen-Worblingen

Technical Support  +49 (0) 7731 9339 - 0
 +49 (0) 7731 2 88 03
 info@elgo.de

Document- No. 799000706

Document- Name KMIX2-000-MA-E_23-21

Document- Revision Rev. 4

Issue Date 2021-06-11

Copyright © 2021, ELGO Electronic GmbH & Co. KG

1 Contents

1	Contents	3
2	List of Figures.....	4
3	List of Tables	4
4	General, Safety, Transport and Storage	5
4.1	Information Operating Manual	5
4.2	Explanation of Symbols	5
4.1	Terms and abbreviations	5
4.2	Statement of Warranties	6
4.3	Demounting and Disposal	6
4.4	General Causes of Risk.....	6
4.5	Personal Protective Equipment.....	6
4.6	Conventional Use	7
4.7	Safety Instructions for Transport, Unpacking and Loading	7
4.8	Handling of Packaging Material	7
4.9	Inspection of Transport	7
4.10	Storage	7
5	Product Features	8
5.1	Functional Principle	8
5.2	Pulse Diagram.....	8
6	Technical Data	9
6.1	Identification	9
6.2	Dimensions Sensor.....	9
6.3	Technical Data Sensor	10
6.1	Technical Data Magnetic Tape.....	11
7	Installation and First Start-Up.....	12
7.1	Operating Area	12
7.2	Installation of the Sensor	13
7.3	Installation of the Magnetic Tape.....	14
8	Connections.....	17
8.1	Pin Assignment	17
9	Disturbances, Maintenance, Cleaning.....	18
9.1	Fault Clearance.....	18
9.2	Re-start after Fault Clearance.....	18
9.3	Maintenance.....	19
9.4	Cleaning	19
10	Type Designation	20

10.1	Accessories	20
11	Index	23

2 List of Figures

Figure 1: Coding of the magnetic tape	8
Figure 2: Pulse Diagram.....	8
Figure 3: Dimensions of Sensor.....	9
Figure 4: Marker as mounting aid	13
Figure 5: Mounting tolerances during installation	13
Figure 6: Components of the magnetic tape	14
Figure 7: Storage and transport	15

3 List of Tables

Table 1: Technical Data Sensor	10
Table 2: Technical Data Magnetic Tape	11
Table 3: Mounting tolerances	13
Table 4: Resistance against Chemical Influence.....	16
Table 5: Connection 8-pole M12 round plug (Standard).....	17
Table 6: Accessories	20

4 General, Safety, Transport and Storage

4.1 Information Operating Manual

This manual contains important information regarding the handling of the device. For your own safety and operational safety, please observe all safety warnings and instructions. Precondition for safe operation is the compliance with the specified safety and handling instructions. Moreover, the existing local accident prevention regulations and the general safety rules at the site of operation have to be observed.

Please read the operating manual carefully before starting to work with the device! It is part of the product and should be kept close to the device and accessible for the staff at any time. The illustrations in the manual are for better demonstration of the facts. They are not necessarily to scale and can slightly differ from the actual design.

4.2 Explanation of Symbols

Special notes in this manual are characterized by symbols. The notes are introduced by signal words which express the magnitude of danger. Please follow this advice and act carefully in order to avoid accidents, damage, and injuries.

Warning notes:

	DANGER! This symbol in connection with the signal word "Danger" indicates an immediate danger for the life and health of persons. Failure to heed these instructions can result in serious damage to health and even fatal injury.
	WARNING! This symbol in connection with the word „Warning“ means a possibly impending danger for the life and health of persons. Failure to heed these instructions can result in serious damage to health and even fatal injury.
	CAUTION! This symbol in connection with the signal word "Caution" indicates a possibly dangerous situation. Failure to heed these instructions can lead to minor injuries or damage of property.

Special safety instructions:

	DANGER! This symbol in connection with the signal word "Danger" indicates an immediate danger for the life and health of persons due to voltage. Failure to heed these instructions can result in serious damage to health and even fatal injury. The operations may only be carried out by a professional electrician.
---	---

Tips and recommendations:

	NOTE! ...points out useful tips and recommendations as well as information for an efficient and trouble-free operation.
---	---

Reference marks:

-  Marks a reference to another chapter of this manual.
-  Marks a reference to another chapter of another document.

4.1 Terms and abbreviations

Abbreviation/ Term	Connection option acc. to type designation

4.2 Statement of Warranties

The producer guarantees the functional capability of the process engineering and the selected parameters.

4.3 Demounting and Disposal

Unless acceptance and disposal of returned goods are agreed upon, demount the device considering the safety instructions of this manual and dispose it with respect to the environment.

Before demounting, disconnect the power supply and secure against re-start. Then disconnect the supply lines physically and discharge remaining energy. Remove operational supplies and other material.

Disposal: Recycle the decomposed elements: Metal components in scrap metal, Electronic components in electronic scrap, Recycle plastic components, dispose the remaining components according to their material consistence.



CAUTION!

Wrong disposal causes environmental damages!
Electronic scrap, electronic components, lubricants and other auxiliary materials are subject to special refuse and can only be disposed by authorized specialists!

Local authorities and waste management facilities provide information about environmentally sound disposal.

Safety



CAUTION!

Please read the operating manual carefully, before using the device! Observe the installation instructions!
Only start up the device if you have understood the operating manual.
The operating company is obliged to take appropriate safety measure.
The initial operation may only be performed by qualified and trained staff.
Selection and installation of the devices as well as their embedding into the controlling system require qualified knowledge of the applicable laws and normative requirements on the part of the machine manufacturer.

4.4 General Causes of Risk

This chapter gives an overview of all important safety aspects to guarantee an optimal protection of employees and a safe and trouble-free operation. Non-observance of the instructions mentioned in this operating manual can result in hazardous situations.

4.5 Personal Protective Equipment

Employees have to wear protective clothing during the installation of the device to minimize danger of health.

Therefore:

Change into protective clothing before performing the works and wear them throughout the process.
Additionally observe the labels regarding protective clothing in the operating area.

Protective clothing:

	<p>PROTECTIVE CLOTHING ... is close-fitting working clothing with light tear strength, tight sleeves and without distant parts. It serves preliminarily for protection against being gripped by flexible machine parts. Do not wear rings, necklaces or other jewelry.</p>
	<p>PROTECTIVE GLOVES ...for protecting the hands against abrasion, wear and other injury of the skin.</p>
	<p>PROTECTIVE HELMET ...for protection against injuries of the head.</p>

4.6 Conventional Use

The ELGO-device is only conceived for the conventional use described in this manual.
The device type - ELGO- length measuring system only serves to measure lengths.



CAUTION!

Danger through non-conventional use!

Non-intended use and non-observance of this operating manual can lead to dangerous situations.

Therefore:

- Only use the device as described
- Strictly follow the instructions of this manual

Avoid in particular:

- Remodeling, refitting or changing of the construction or single components with the intention to alter the functionality or scope of the device.

Claims resulting from damages due to non-conventional use are not possible.
Only the operator is liable for damages caused by non-conventional use.

4.7 Safety Instructions for Transport, Unpacking and Loading



CAUTION!

Transport the package (box, palette etc.) professionally.

Do not throw, hit or fold it.

4.8 Handling of Packaging Material

Notes for proper disposal: ↗ 4.3

4.9 Inspection of Transport

Check the delivery immediately after the receipt for completeness and transport damage.
In case of externally recognizable transport damages:

- Do not accept the delivery or only accept under reserve.
- Note the extent of damages on the transportation documents or delivery note.
- File complaint immediately.



NOTE!

Claim any damage immediately after recognizing it.

The claims for damage must be filed in the lawful reclaim periods.

4.10 Storage

Store the device only under the following conditions:

- Do not store outside
- Keep dry and dust-free
- Do not expose to aggressive media
- Protect from direct sun light
- Avoid mechanical shocks
- Storage temperature (↗ 6) needs to be observed
- Relative humidity (↗ 6) must not be exceeded
- Inspect packages regularly if stored for an extensive period of time (>3 months)

5 Product Features

The magnetic incremental measuring system KMIX2 consists of a round sensor head with an already integrated translator circuit and an 8-pole M12 round connector.

For linear measurement, a coded magnetic tape is glued along the distance to be measured. The magnetic tape supplies the necessary information (current position) to the incremental sensor. The sensor is guided contactless and absolutely wear-free over the magnetic tape.

Alternatively, diverse magnetic rings (see photo right) for rotary applications (e. g. measurement of angles or rotational speed) are available.

The mounting distance from the sensor to the magnetic tape or magnetic ring may be up to 2 mm.

The sensor is generally powered in the range 10 ... 30 VDC and has an HTL square-wave output (A, B, Z) with a level that corresponds to the applied power supply voltage.



Overview of features:

- Round sensor with M10 fine thread
- Integrated translator
- Small and compact design
- Contactless measurement
- 25 μm resolution at 4-edge triggering

5.1 Functional Principle

The basis of the magnetic incremental encoders consists of a scanning technology, which scans the north and south poles on the coded magnetic tape and produces a single Sine/Cosine wave for each pole.

The complete sine/cosine signal process is interpolated electronically. Depending on refinement of the interpolation, together with the pole distance of the magnetic tape, the resolution of the measuring system is determined.

The magnetic tape MB20-50 has a pole pitch of 5 mm. A special evaluation electronic (translator) processes the sine/cosine wave into square output signals from the signal information of the magnetic tape. These square signals are equivalent to conventional optical rotary- or linear encoder outputs.

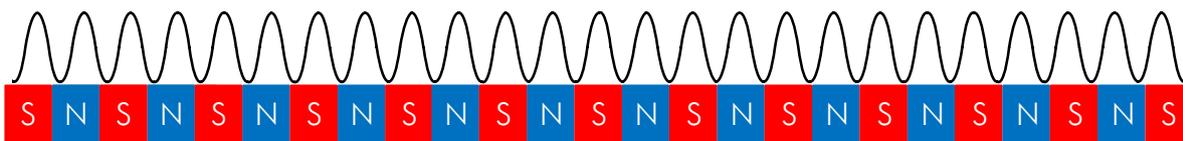


Figure 1: Coding of the magnetic tape

5.2 Pulse Diagram

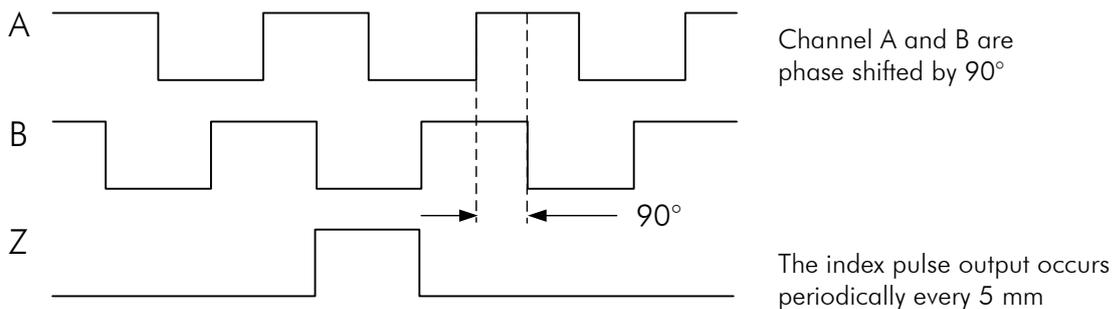


Figure 2: Pulse Diagram

6 Technical Data

6.1 Identification

The type label serves for the identification of the unit. It is located on the housing of the device and indicates the exact type designation (=order reference \varnothing 10) with the corresponding part number. Furthermore, the type label contains a unique, traceable device number. When corresponding with ELGO please always indicate this data.

6.2 Dimensions Sensor

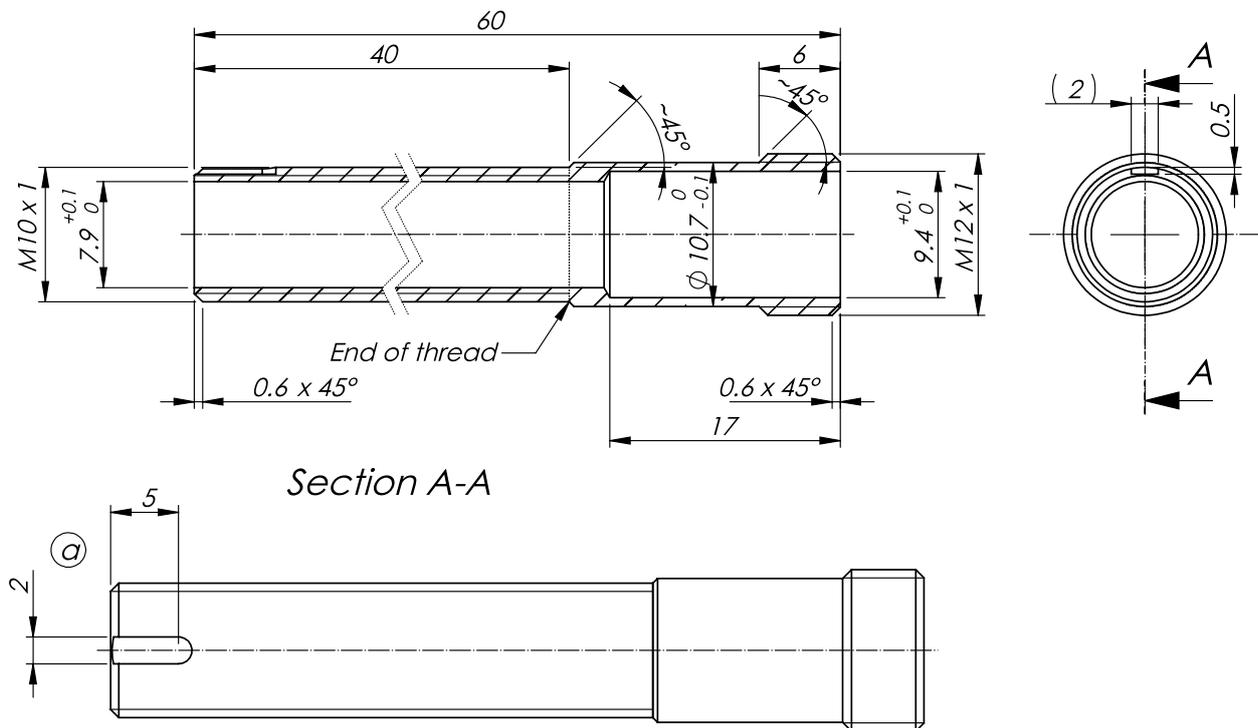


Figure 3: Dimensions of Sensor

6.3 Technical Data Sensor

Table 1: Technical Data Sensor

Sensor KMIX2	
Mechanical Data	
Measurement principle	incremental
Repeat accuracy	± 1 increment
System accuracy in μm at 20 °C	± (25 + 20 x L) L = Messlänge in Meter
Distance sensor / magnetic tape	max. 2.0 mm
Housing material	stainless steel
Housing dimensions (L x D)	60 x Ø 12 mm
Housing installation	via M10 x 1 fine thread
Required magnetic tape	MB20-50-10-1-R
Pole pitch	5 mm
Maximum measuring length	theoretically unlimited
Connection type	8-pin M12 round connector
Sensor cable	5 m cable as an accessory (others on request), drag chain suitable
Sensor cable bending radius	60 mm
Weight	approx. 35 g (without cable); cable: approx. 60 g/m
Electrical Data	
Power supply voltage	10 ... 30 VDC
Residual ripple	< 10 %
Current consumption	max. 150 mA
Output signals	A, B, Z
Output levels	HTL
Output current per channel	max. 20 mA
Resolution (at 4 edge evaluation)	25 μm
Index pulse (Z)	every 5 mm (periodically)
Output frequency per channel	max. 80 kHz
Operating speed	max. 4 m/s
Environmental conditions	
Storage temperature	-25 ... +85 °C
Operating temperature	-10 ... +70 °C (-25 ... +85 °C on request)
Humidity	max. 95 %, non-condensing
Protection class	IP67

6.1 Technical Data Magnetic Tape

The magnetic tape consists of two components:

- The actual magnetic tape which carries the position information
- A mechanical stainless steel back iron

Table 2: Technical Data Magnetic Tape

Magnetic Tape MB20-50-10-1-R

Coding of MB20-50-10-1-R	Incremental, single track system
Pole pitch	5 mm
Operation temperature installed	-20 °C ... +65 °C
Storage temperature uninstalled	Short-term: -10°C ... +60°C Medium-term: 0°...+40°C Long-term: +18°C
Gluing temperature:	+18°C ... +30°C
Relative humidity	max. 95 %, non-condensing
Accurateness 20°C in μm	+/- (25 + 20 x L) L = measuring length in meters
Material carrier tape	Precision strip 1.4310 / X10CrNi 18-8 (EN 10088-3)
Double-faced adhesive tape	3M-9088 (observe instructions), others on request
Dimensions (W x H)	<ul style="list-style-type: none"> ➔ with carrier tape, without adhesive tape: 10 mm ($\pm 0,1$) x 1.35 mm (± 0.11) ➔ with carrier tape + adhesive tape, without protection foil: 10 mm ($\pm 0,1$) x 1.56 mm (± 0.13) ➔ with carrier tape + adhesive tape + protection foil: 10 mm ($\pm 0,1$) x 1.63 mm (± 0.14)
Length expansion coefficient	$\alpha \approx 16 \times 10^{-6} \text{ 1/K}$
Thermal length expansion	$\Delta L[\text{m}] = L[\text{m}] \times \alpha[1/\text{K}] \times \Delta\theta[\text{K}]$ (L = tape length in meters, $\Delta\theta$ = relative temperature change)
Bending radius	min. 60 mm
Available lengths	32 m (up to 70m on request)
Weight magnetic tape	ca. 62 g/m (incl. magnetic tape and cover tape)
Tape imprint	ELGO standard, printing color black, digit height ≥ 5 mm
Influence of external magnets	External magnetic fields must not exceed 64 mT (640 Oe; 52 kA/m) on the surface of the magnetic tape as this could damage or destroy the code on the tape.
Protection class	IP65

7 Installation and First Start-Up

	<p>CAUTION Please read the operating manual carefully before using the device! Strictly observe the Installation instructions! In case of damage caused by failure to observe this operating manual, the warranty expires.</p> <p>ELGO is not liable for any secondary damage and for damage to persons, property or assets.</p> <p>The operator is obliged to take appropriate safety measures.</p> <p>The first start-up may only be performed by qualified staff that has been trained and authorized by the operator.</p>
---	--

7.1 Operating Area

	<p>WARNING! Do not use the device in explosive or corrosive environments! The device must not be installed close to sources of strong inductive or capacitive interference or strong electrostatic fields!</p>
---	---


	<p>CAUTION! The electrical connections must be made by suitably qualified personnel in accordance with local regulations.</p>
	<p>The device may be designed for switchboard mounting. During work on the switchboard, all components must be de-energized if there is a danger of touching the energized parts! (protection against contacts)</p>
	<p>Wiring works may only be performed in the de-energized state!</p>
	<p>Thin cable strands have to be equipped with end sleeves! Before switching on the device, connections and plug connectors have to be checked!</p>
	<p>The device must be mounted in a way that it is protected against harmful environmental influences such as splashing water, solvents, vibration, shock and severe pollution and the operating temperature must not be exceeded.</p>

7.2 Installation of the Sensor

The sensor has an M10 x 1 fine thread on the outside (see also 6.2 Dimensions Sensor). Suitable hexagon nuts are included for mounting. Alternatively, the customer can drill a core hole with a corresponding thread into a specific holder.

7.2.1 Orientation Marker

The sensor has marker for orientation during mounting.

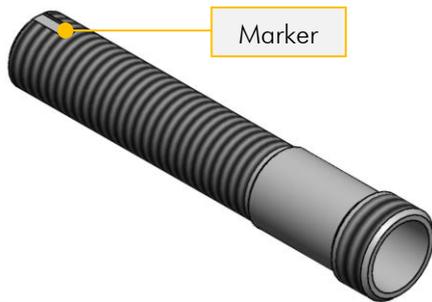

Please observe the following points during installation:

- The marker must be aligned exactly to the center of the magnetic tape (twisting angle $\pm 0.5^\circ$).
- The sensor must maintain an angle of 90° to the magnetic tape in all directions.
- The maximum reading distance and mounting tolerances (see next section) must be strictly adhered to.

Figure 4: Marker as mounting aid

7.2.2 Mounting Tolerances

Table 3: Mounting tolerances

Tolerances	
Magnetic Tape Type	MB20-50-10-1-R
Ride height	max. 0.5 ... 2 mm
Pitch (lateral/longitudinal)	$\pm 0.5^\circ$
Twisting angle	$\pm 0.5^\circ$
Lateral offset	± 0.5 mm

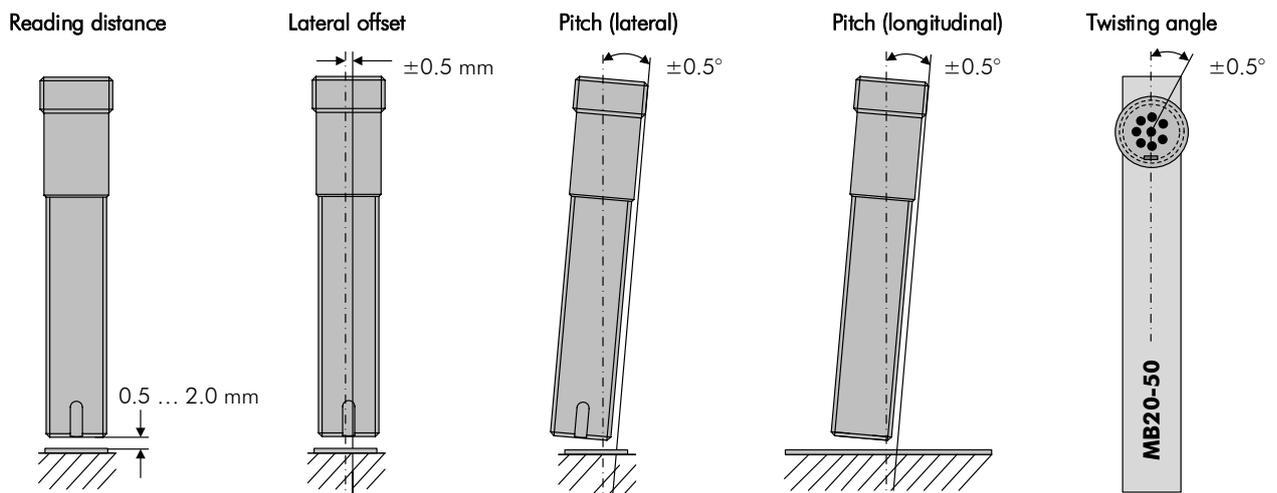


Figure 5: Mounting tolerances during installation

7.2.3 Activation of the Device

The sensor is switched on and ready for operation immediately after the supply voltage is applied.

7.3 Installation of the Magnetic Tape



NOTE: External Magnetic Fields

The magnetic tape must not be influenced by external magnetic fields!
The magnetic tape must not come into direct contact with other magnetic fields (e.g. permanent magnets, magnetic clamps, electromagnets, magnetic stands)! This may cause irreparable damage, which will compromise the measuring accuracy or even the functioning.

7.3.1 The Magnetic Tape MB20-50-10-1-R

In the standard case, the magnetic tape is delivered as described
It is installed by gluing it to the respective mounting surface.

The magnetic tape consists of 2 pre-assembled components (see Figure 6: Components of the magnetic tape below):

- A magnetized, flexible plastic tape (Pos. 3), which is connected with a magnetically conductive steel tape as inference band (Pos. 4) and is supplied with an adhesive tape (Pos. 5).
- A magnetized permeable cover tape (Pos. 1), which serves for the mechanical protection of the plastic tape (not required for the measurement) and is supplied with an adhesive tape (Pos. 2).

Therefore a divergent tape structure and scope of delivery is also possible.
The cover tape is also available separately

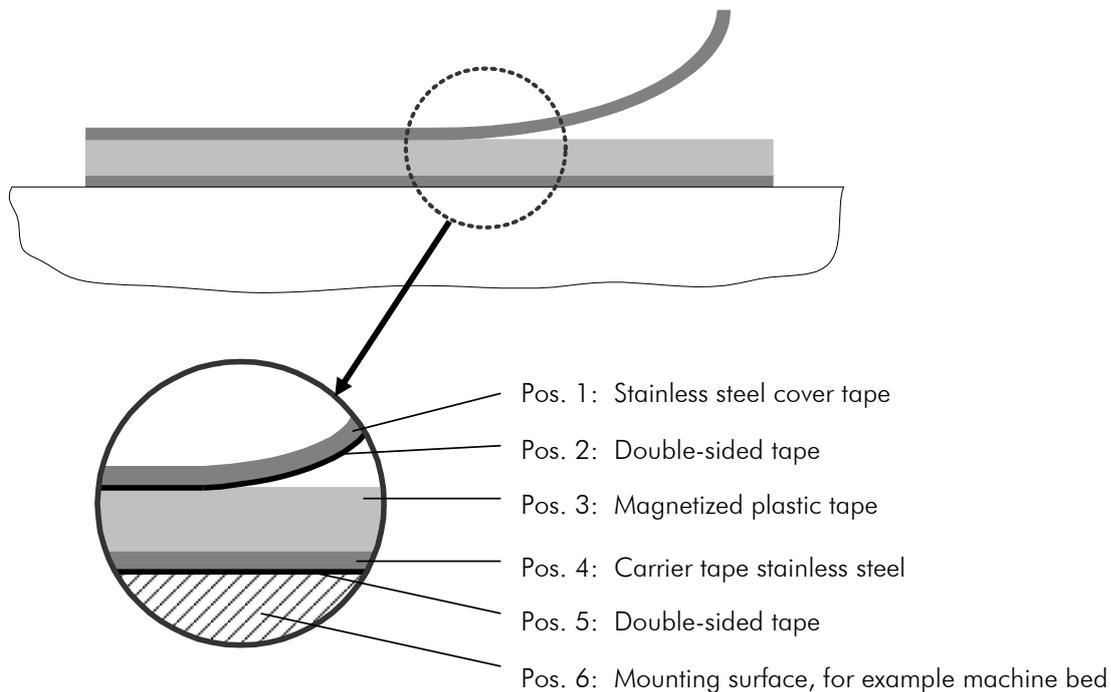


Figure 6: Components of the magnetic tape

7.3.2 Handling

In order to avoid tension in the tape, it must not be stretched, compressed or twisted. It should be stored with the magnetized plastic tape to the outside. The minimum bending radius is 150 mm.



Figure 7: Storage and transport

7.3.3 Processing hint for the gluing of magnetic tapes

Surface-Preparation: In order to guarantee optimal adhesion, all anti-adhesive contamination (e.g. oil, grease, dust, separating agents) has to be removed using solvents with residue-free evaporation. Suitable agents are ketones or alcohols. Typical solvents for cleaning the surface are a 50/50 isopropyl alcohol/water mixture or heptane. Those agents are offered by Loctite and 3M among others as surface cleaners. When using solvents, always observe the manufacturer instructions! If the surface is copper, brass etc., it should be sealed to avoid oxidation.

Contact-Pressure: The strength of the adhesion is directly dependent on the contact the adhesive can form with the surface. Therefore it is important to use as much pressure as possible when gluing the tape, possibly by using aids such as draw rolls. The optimum contact pressure is 4...5 kg/cm².

Gluing temperature: The optimal gluing temperature is between + 18° C and 30° C. Avoid colder sticking surfaces than + 10°C, because in this case the adhesive becomes too hard and perhaps a sufficient immediate adhesion is hardly to achieve. After proper sticking, the stability of the connection is ensured also when the temperature is below zero. The final tackiness of a sticking is from experience reached after approximately 72 hours (at + 21° C). For gluing use only the supplied adhesive tape.

7.3.4 Cutting and Gluing

Before starting the gluing process, both the magnetic and the cover tape have to be cut to the required length

$$\text{Length cover tape} = \text{measuring length} + \text{sensor length} + 50\text{mm (end caps)}$$



NOTE!

When sticking the magnetic tape pay attention to the markings on the tape and the Sensor. Improper installation does not provide the correct values. An already glued magnetic tape is destroyed after the removal, and cannot be used again. Note also the direction of counting of the measuring system

Preferably the magnetic tape should be glued close to an edge or into a groove, which should be deep enough to embed the magnetic tape and the cover tape.

When unprotected, the cover tape may peel off!

Therefore:

Use tape end caps (☞ 10.1) or let the cover tape overlap the end of the magnetic tape and fix it with a screw.

The tape must be glued smoothly on the surface. The measuring accuracy decreases if the tape is not even!

Before gluing the magnetic tape and the cover tape onto the surface, they should be left lying on the mounting surface for ca. 30 minutes so that the temperature matches. This prevents strain in the tape due to thermal expansion.

Mounting steps:

1. Thoroughly clean the surface (☞ 7.3.3)
2. Acclimatization: let magnetic tape and cover tape adjust their temperature
3. Remove the protection foil from the magnetic tape
4. Glue magnetic tape under great pressure
5. Thoroughly clean surface of magnetic tape
6. Remove the protection foil from the cover tape
7. Glue the cover tape under great pressure
8. Safeguard the ends of the cover tape against peeling off, e.g. by using end caps (☞ 10.1)

7.3.5 Resistance against Chemical Influence

Table 4: Resistance against Chemical Influence

Show no or little effect in constant contact after 2-5 years:

formic acid	glycerol 93°C	linseed oil	soy beans oil
cotton seed oil	N-hexane	lactic acid	
formaldehyde 40%	Iso octane	petroleum	

Show weak to moderate effects in constant contact after approximately 1 year:

acetone	gasoline	acetic acid 30%	oleic acid
acetylene	steam	acetic acid, pure acetic acid	sea water
ammonia	acetic acid 20%	isopropyl ether	stearic acid 70°C, anhydrous
kerosene			


Have strong effects when contacting permanently after 1-5 months:

benzene	nitric acid 70%	turpentine	toluene
lacquer solvent	nitric acid, red, vitriolic	carbon tetrachloride	tetrahydrofuran
trichloroethylene	nitrobenzene	hydrochloric acid 37%, 93°C	xylene

8 Connections

8.1 Pin Assignment

Table 5: Connection 8-pole M12 round plug (Standard)

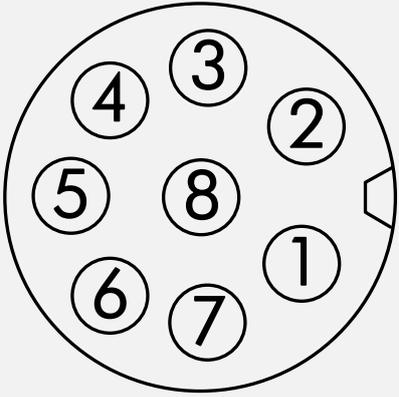Connector	PIN	Color	Function
	1	green	n. c.
	2	pink	Channel Z
	3	black	Channel A
	4	grey	n. c.
	6	violet	n. c.
	7	white	0 V (GND)
	8	brown	10 ... 30 VDC
	9	yellow	Channel B



IMPORTANT NOTE!

- Please DON'T connect the sensor housing to PE / protective earth!



- If it is not possible to prevent a contact between sensor housing and PE, then connect the 0 V (GND) wire of the sensor also to PE potential in order to counteract extreme electromagnetic interference sources.

9 Disturbances, Maintenance, Cleaning

This chapter describes possible causes for disturbances and measures for their removal. In case of increased disturbances, please follow the measures for fault clearance in chapter 9.1. In case of disturbances that cannot be eliminated by following the advice and the fault clearance measures given here, please contact the manufacturer (see second page).

9.1 Fault Clearance



CAUTION!

The device, the connection line and the signal cable must not be installed next to sources of interference that emit strong inductive or capacitive interference or strong electrostatic fields.

External perturbations can be avoided through suitable cable routing.



The screen of the signal output cable should only be connected to the following circuit on one side. The screens should not be grounded on both sides. Signal cables always have to be routed separately from the load power line. A safety distance of at least 0.5 m has to be kept from inductive and capacitive sources of interference such as contactors, relays, motors, switching power supplies, clocked controllers etc.!

If interferences occur in spite of all the items stated above being observed, please proceed as follows:

1. Installation of RC-circuits via contactor coils of AC-contactors (e.g. 0.1 μ F / 100 Ω)
2. Installation of recovery diodes via DC-inductors
3. Installation of RC-circuits via the different motor phases (in the terminal box of the motor)
4. Do not connect protective earth and ground
5. Connect a mains filter ahead of the external power pack

9.2 Re-start after Fault Clearance

After the fault clearance:

1. Reset the emergency stop mechanism if necessary
2. Reset the error report at the super-ordinate system if necessary.
3. Ensure that there are no persons in the danger area.
4. Follow the instructions from chapter 7.



WARNING! Danger of injury through non-conventional fault clearance!

Non-conventional fault clearance can lead to severe injuries and damage of property.

Therefore:

- Any work to clear the faults may only be performed by sufficiently qualified staff
- Arrange enough space before starting the works
- Make sure that the mounting area is clean and tidy. Loose components and tools are sources of accidents.

If components need to be replaced:

- Pay attention to a correct installation of the spare parts.
- Reinstall all the fixing elements properly
- Before turning on the device, ensure that all covers and safety equipment is installed correctly and functions properly

9.3 Maintenance

The device is maintenance-free.



WARNING!

Danger through non-conventional maintenance!

Non-conventional maintenance can lead to severe injuries and damage of property.

Therefore:

Maintenance works may only be completed by staff that has been authorized and trained by the operator.


9.4 Cleaning



WARNING!

The device can only be cleaned with a damp cloth, do not use aggressive cleanser!

10 Type Designation

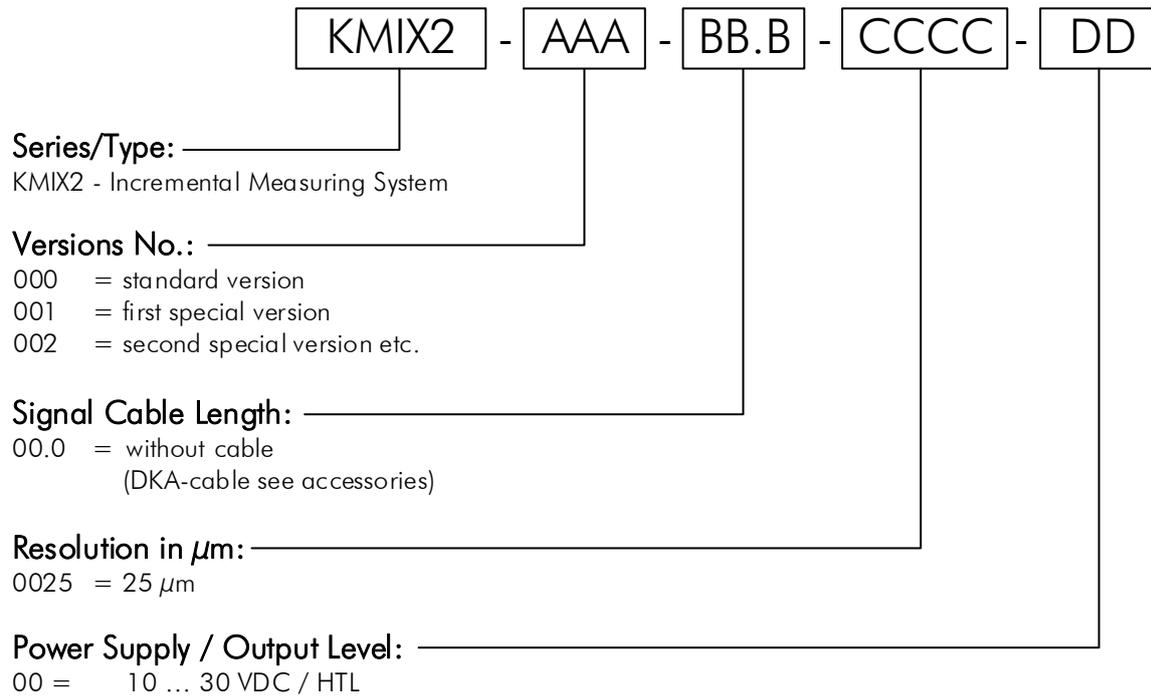

NOTE

When ordering, please use the here described ordering code (Type Designation).
Options that are not required are filled in with „-“.

10.1 Accessories

Table 6: Accessories

Order Designation	Description
DKA-00-R8F0-050*-XXXX-08-T-D-S	8-wire signal cable with M12 thread, female round connector (sensor side) and open wires (customer side), twisted pairs, drag chain suitable, with shield. Bending radius 60 mm. Weight approx. 60 g/m. *) 050 = 5 Meter standard length (other lengths on request)
MB20-50-10-1-R	Magnetic tape, pole pitch 5.0 mm (please indicate measuring length in XX.X m)
End cap set 10 mm	End caps for fixing 10 mm wide magnetic tapes
MR2012	Magnet ring, pole pitch 5 mm (12 poles, \varnothing ext.: 19,75 mm / \varnothing i: 14,7 mm)
MR3824	Magnet ring, pole pitch 5 mm (24 poles, \varnothing ext.: 38 mm / \varnothing i: 30 mm)
MR7244	Magnet ring, pole pitch 5 mm (44 poles, \varnothing ext.: 72 mm / \varnothing i: 54 mm)

Notes:



Notes:

11 Index

Accessories	20	Operating area	12
Accident prevention regulations.....	5	Operational safety.....	5
Activation of the Device.....	13	Order reference	9
Causes of risk.....	6	Orientation Marker.....	13
Cleaning.....	18, 19	Packaging material.....	7
Connections	17	Pin Assignment	17
Conventional use.....	7	Product Features	8
Demounting	6	Protection against contact	12
Device number	9	Protective equipment	6
Dimensions Sensor.....	9	Pulse Diagram	8
Disposal.....	6	Safety	5, 6
Disturbances	18	Safety instructions	5
Explanation of symbols.....	5	Safety rules	5
Fault clearance.....	18	Start-up	12
First start-up	12	Storage	7
Functional Principle.....	8	Technical Data Magnetic Tape	11
Identification	9	Technical Data Sensor	10
Installation	12	Transport.....	7
Installation of the Magnetic Tape	14	Transport damage	7
Installation of the Sensor	13	Type designation	9
Maintenance	18, 19	Type Designation	20
Mounting Tolerances	13		

Document- No.: 799000706 / Rev. 4
Document- Name: KMIX2-000-MA-E_23-21
Subject to change - © 2021
ELGO Electronic GmbH & Co. KG

ELGO Electronic GmbH & Co. KG
Measuring | Positioning | Control
Carl - Benz - Str. 1, D-78239 Rielasingen
Fon: +49 (0) 7731 9339-0, Fax: +49 (0) 7731 28803
Internet: www.elgo.de, Mail: info@elgo.de

